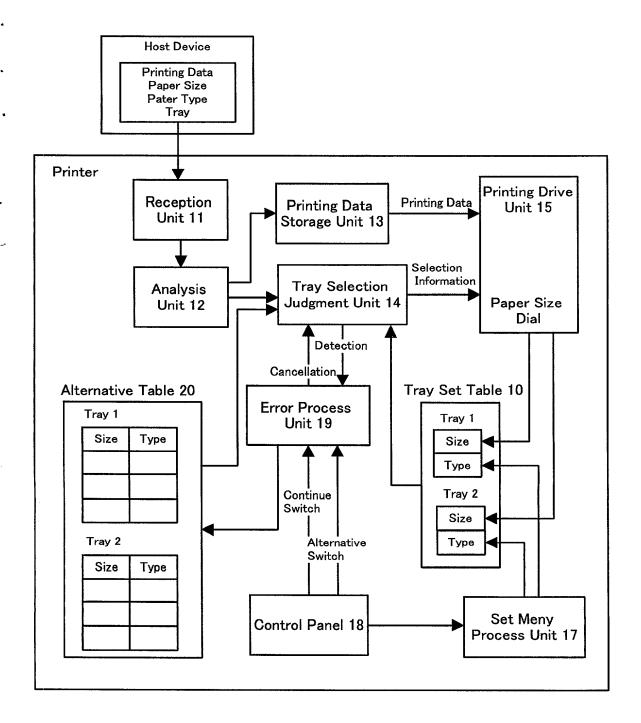


FIG. 2



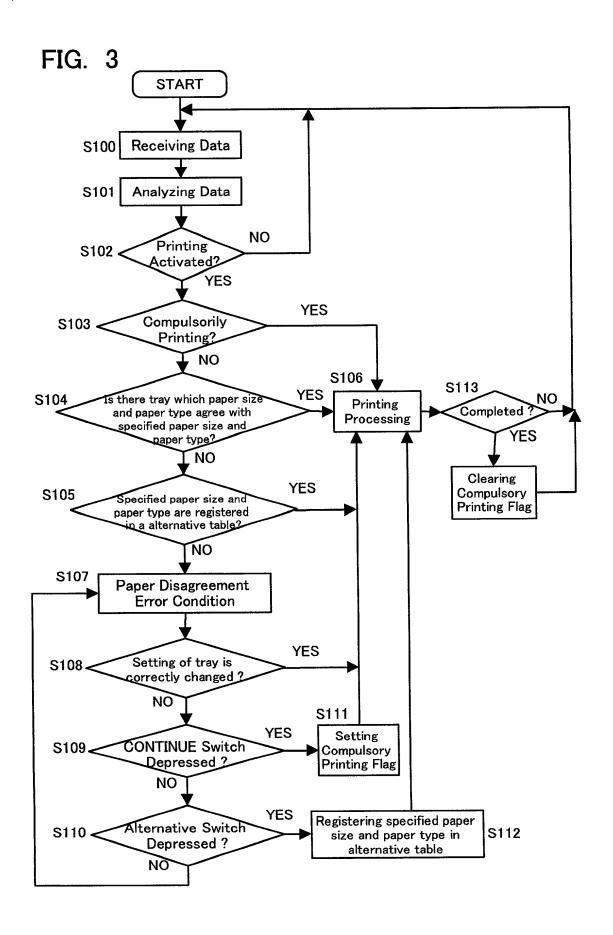


FIG. 4

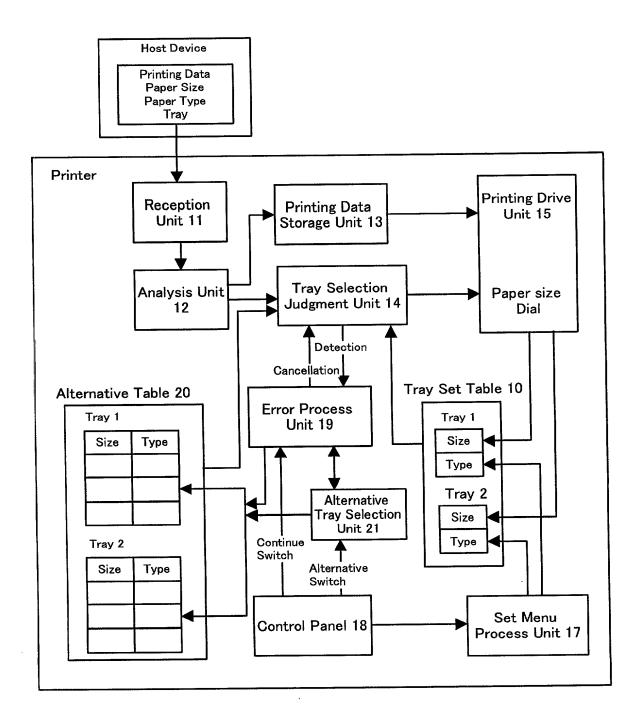


FIG. 5

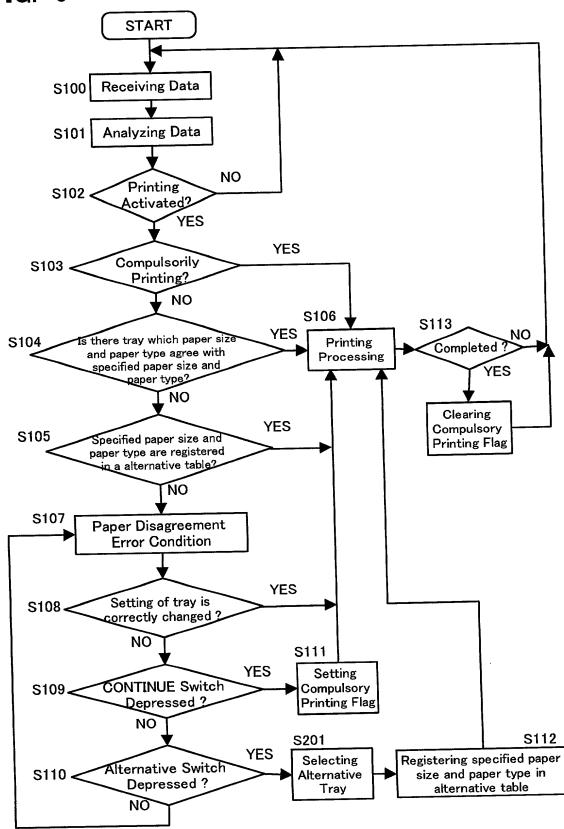


FIG. 6

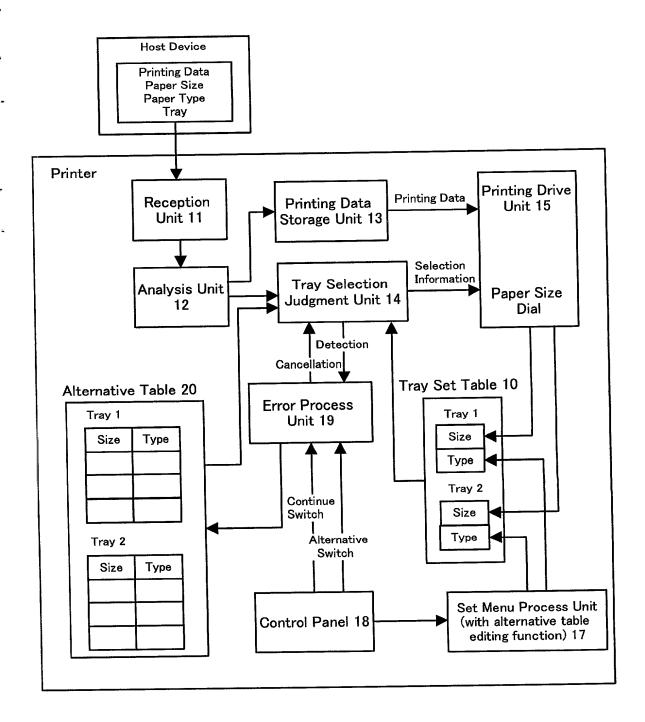


FIG. 7

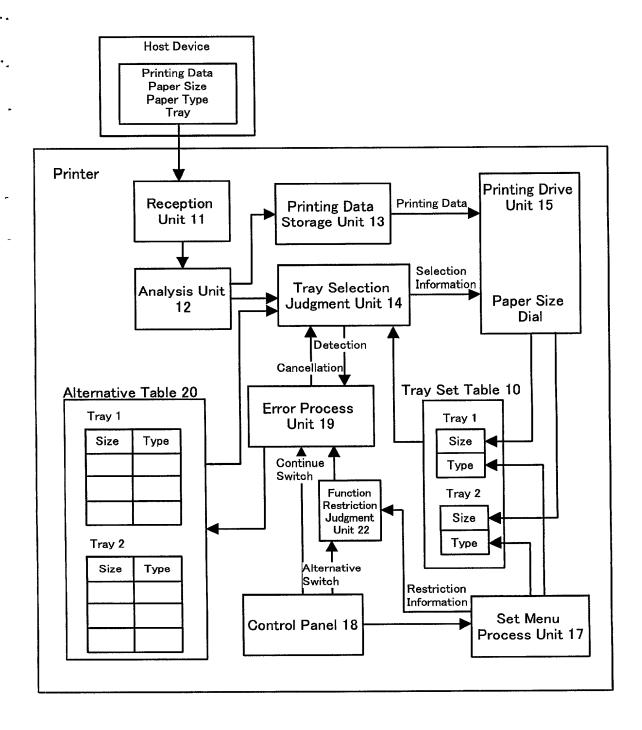


FIG. 8

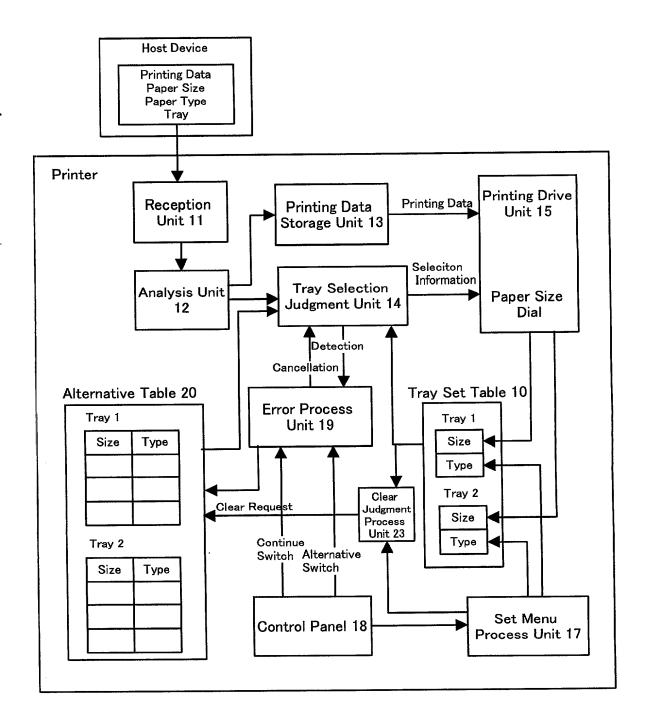


FIG. 9

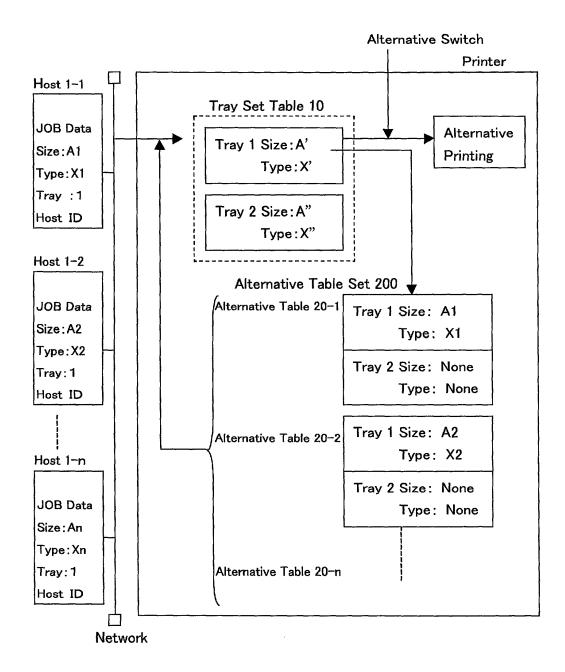


FIG. 10

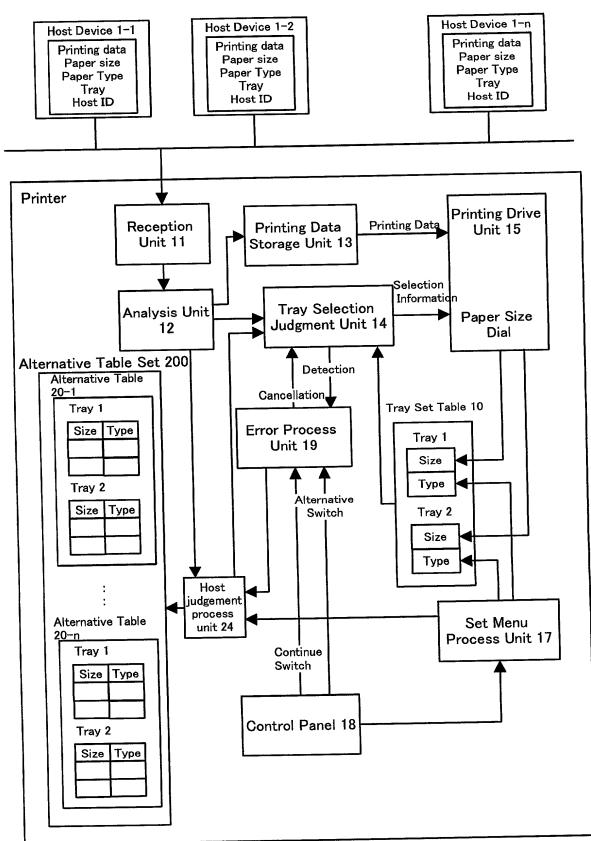


FIG. 11

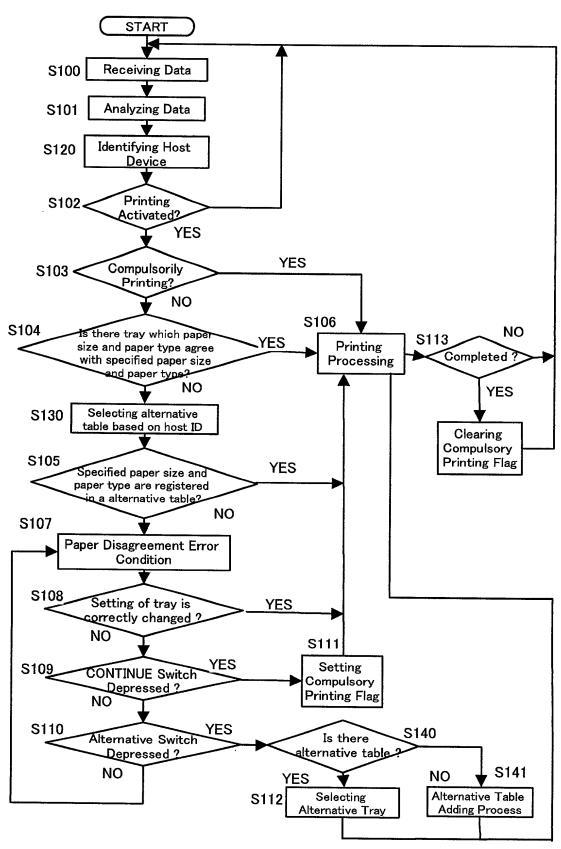


FIG. 12

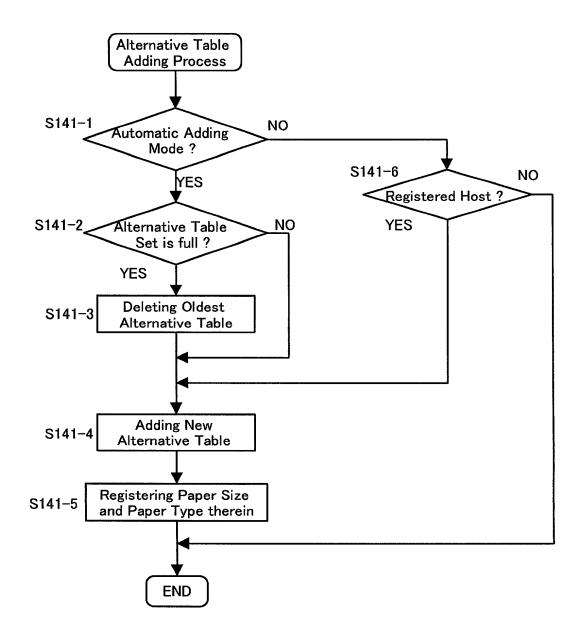


FIG. 13

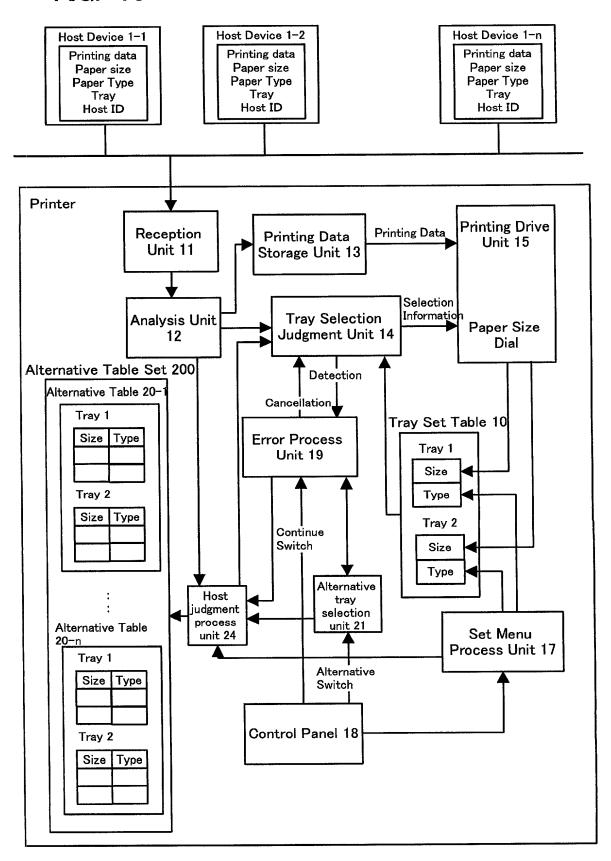


FIG. 14

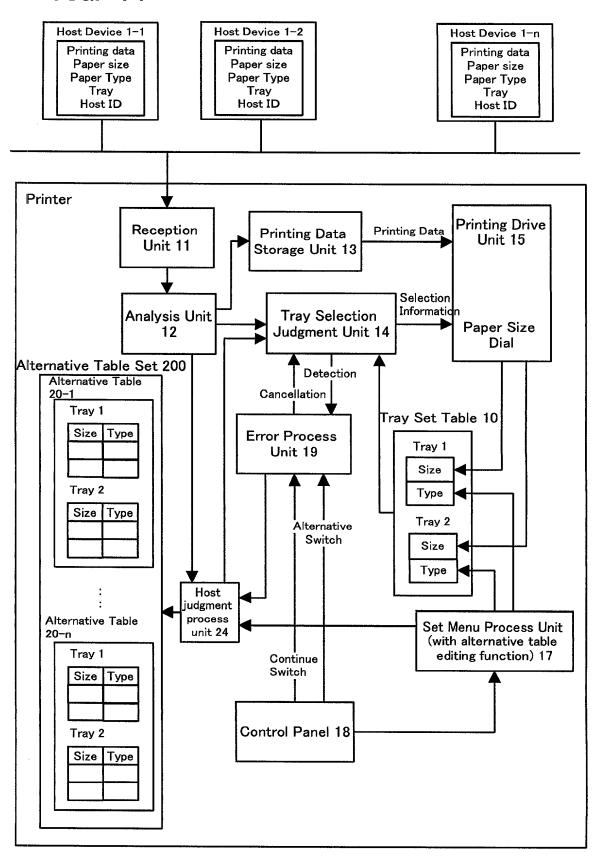


FIG. 15

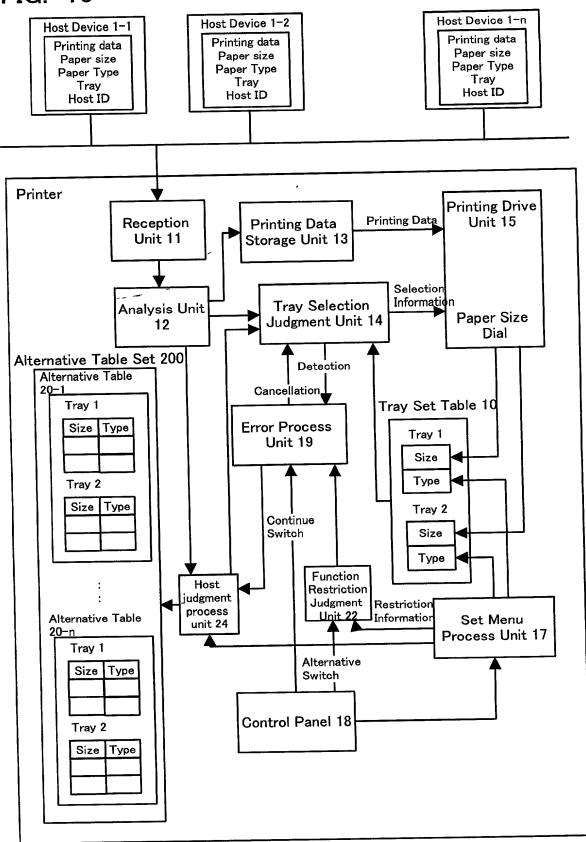


FIG. 16

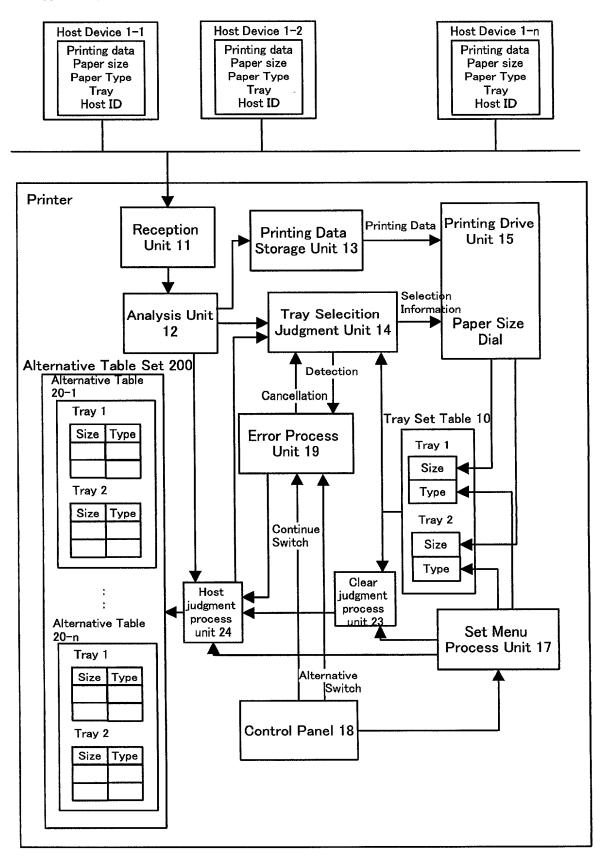


FIG. 17

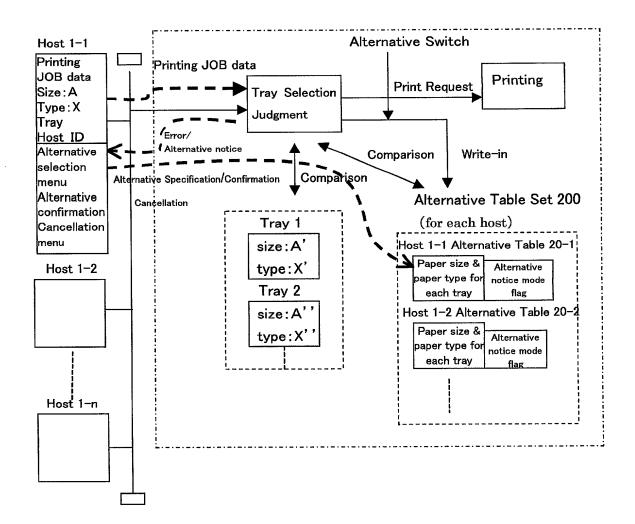


FIG. 18A

□Menu Window	
Information:	
Warning: Substitute Printing Print from tray 1 (<u>A4 Plain</u>) for <u>Letter Plain</u>	
OK Cancel	

FIG. 18B

□Menu Window □□⊠
Information:
Error : Paper Miss match
Load tray 1 : <i>Letter Plain</i>
Select Operation:
> Change Paper ▼ OK
Change Paper
Select tray 1 (<i>A4 Plain</i>) for <i>Letter Plain</i>
Select tray 2 (<i>Legal Bond</i>) for <i>Letter Plain</i>
•
•
Information for Substitute Printing:

FIG. 19

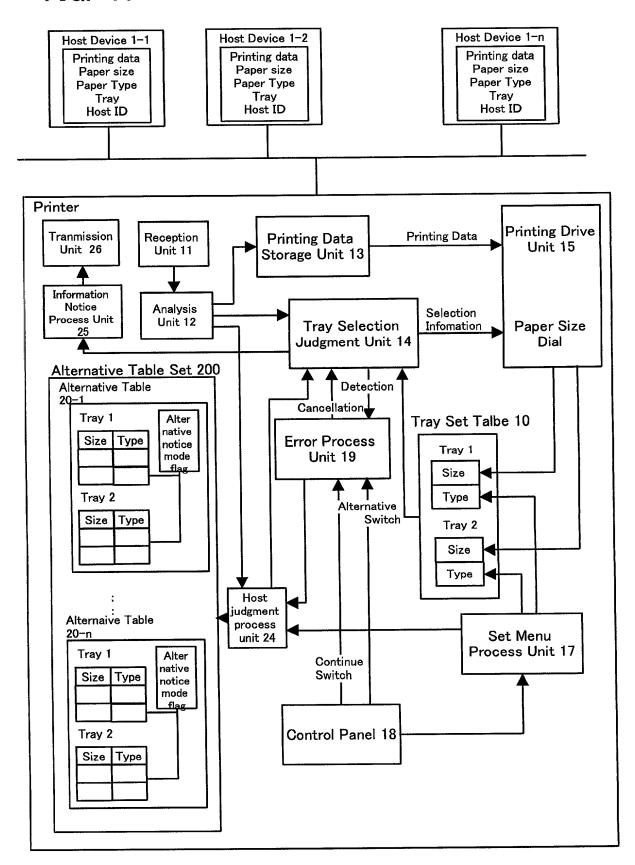


FIG. 20

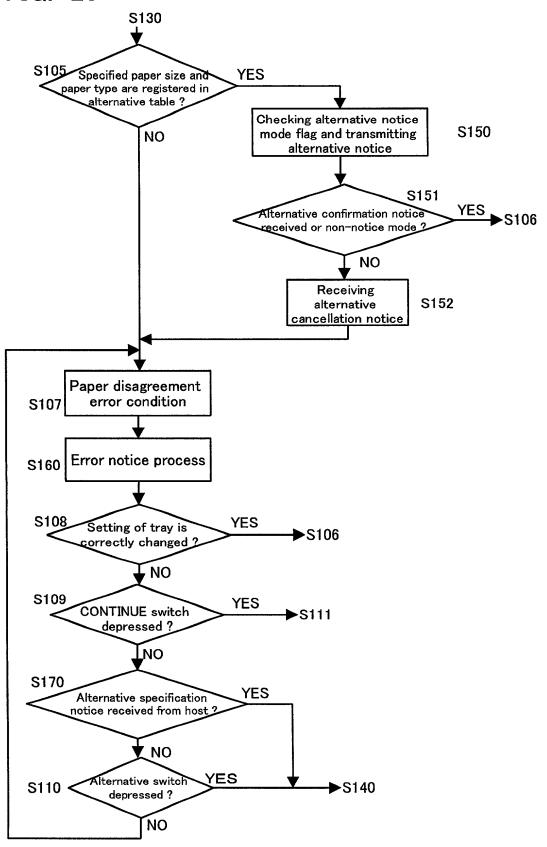


FIG. 21

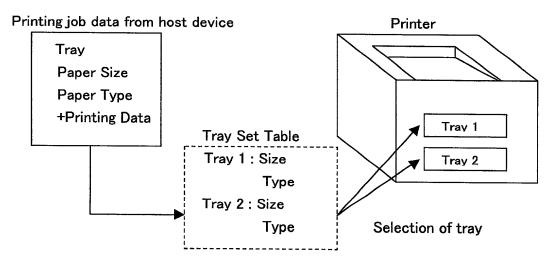


FIG. 22A

Changing paper in tray

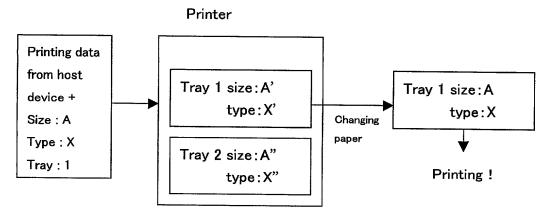


FIG. 22B

Compulsory printing by CONTINUE switch

